

Pantum P2000/2050 Series Printer Firmware Upgrade Guide

Note

- Please connect the printer to the computer,where the driver installed,and make sure the connection is reliable
- Please do not Power off the printer and the computer until firmware update finishes
- Do not run the printer during the firmware update

Printer

- Pantum P2000 Series: P2000 P2050

Version

- P2000 Series:v5.1.6.7

Modified Items

- more compatibility with Pantum New Toner cartridge products
- better use of these products

How to update the firmware

- 1) Make sure that the machine is connected to the PC with a USB cable
- 2) Power on the machine
- 3) Make sure the Installation of the driver for the machine
- 4) Click the tool “SendToPrinter”
- 5) Choose the machine,like “Pantum P2000 Series”
- 6) Print the “send” button

- 7) When in undating progress,the “red” led will be shine
- 8) Wait until the “red” led drown
- 9) Power off the machine
- 10) Power on the machine and the update is successful

❖If the firmware update does not completed after several times, contact the Pantum post sales engineers